

OPERATING INSTRUCTIONS ESPAR DIESEL FIRED JACKET WATER HEATER

NOTE: The battery charger and the battery disconnect switch must be on for heater operation. Extended use could drain the battery below engine starting capabilities.

TIMER OPERATION:

Place the selector switch in the “HEATER TIMER OPERATION” position.

Follow ESPAR’s instructions for the 7-Day Timer with Diagnostics


CONTINUOUS OPERATION:

Place the selector switch in the “HEATER CONTINUOUS OPERATION” position.


Turning the heater on in CONTINUOUS OPERATION

Push the Heater  symbol on the 7-day Timer. The heater will continue to operate.

Turning the heater off in CONTINUOUS OPERATION

Push the Heater  symbol on the 7-day Timer. The heater will continue go into cool down, purge, and shut off.

OR

Change the switch position to “HEATER TIMER OPERATION” and the preset time or default 120 minutes will display. Push the Heater  symbol on the 7-day Timer again and the heater will shut down.