

# QuickFit™

## INSTALLATION GUIDE

KIT # 300472

**ALTORFER APS2000**



### Tool Requirements:

- *Loctite® L592 or equivalent*
- *Drill w/ bits up to 1/2" dia.*
- *Wrenches up to 1 1/2"*
- *Standard & Metric socket sets*
- *Standard Allen key set to 3/4"*

FOR TECHNICAL ASSISTANCE CALL 1-800-255-2250

RPM Industries, LLC • 1660 Jefferson Ave. • Washington, PA 15301  
Phone: 1-800-255-2250 • www.rpmindustries.com • M-F 8:00AM - 5:00PM EST



12641

# QuickFit™


## INSTALLATION GUIDE

### 1. QuickFit Valve Installation


When this block is black, this is an UNCONTROLLED DOCUMENT

Revision Level: 1

Date: 3-3-2015

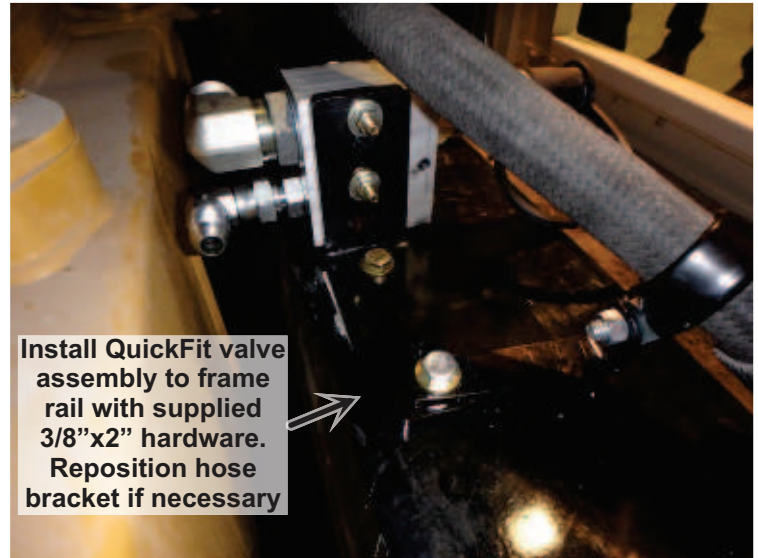


### 2. Engine Pressure Port Installation

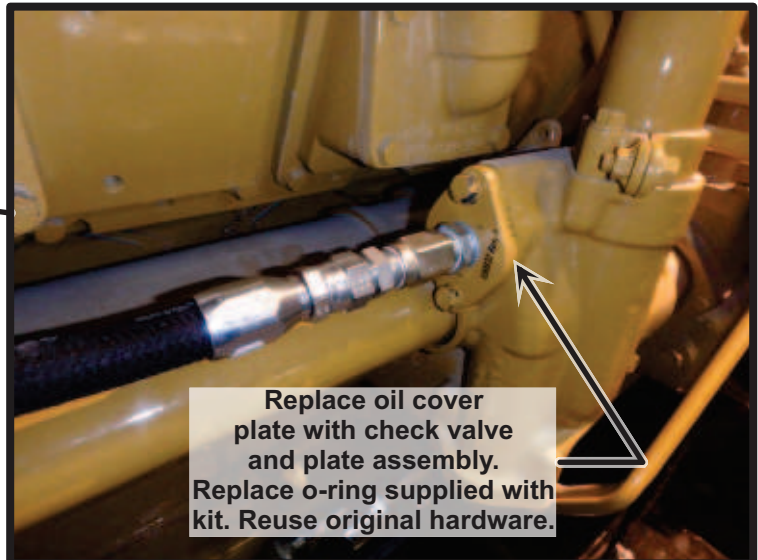

# QuickFit™

## INSTALLATION GUIDE

### 3. Pressure Line Installation



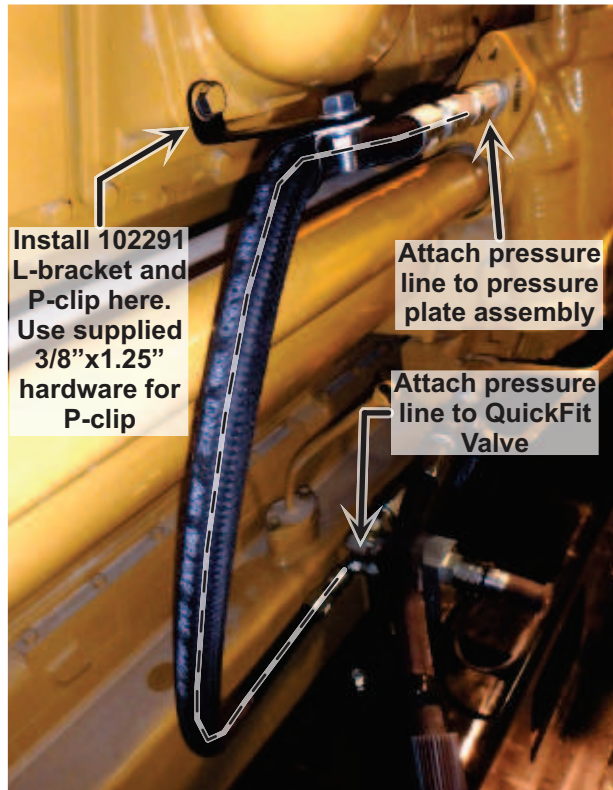


When this block is black, this is an UNCONTROLLED DOCUMENT

Revision Level: 1

Date: 3-3-2015

### 4. Suction Line Installation

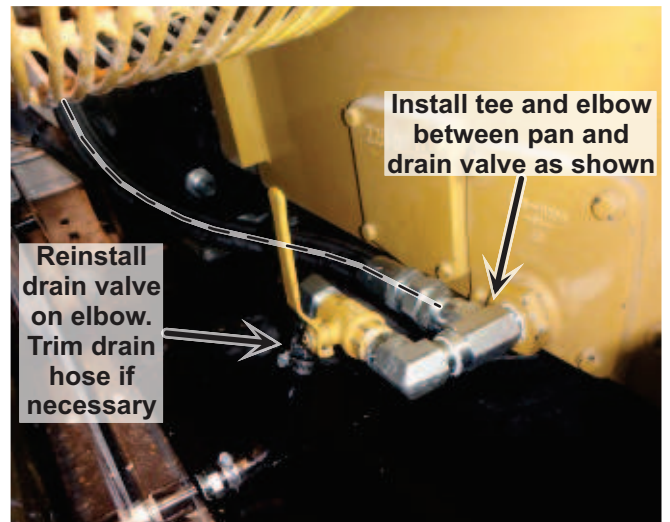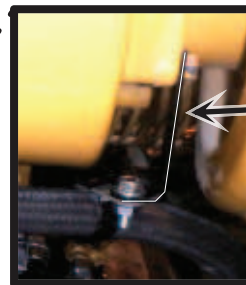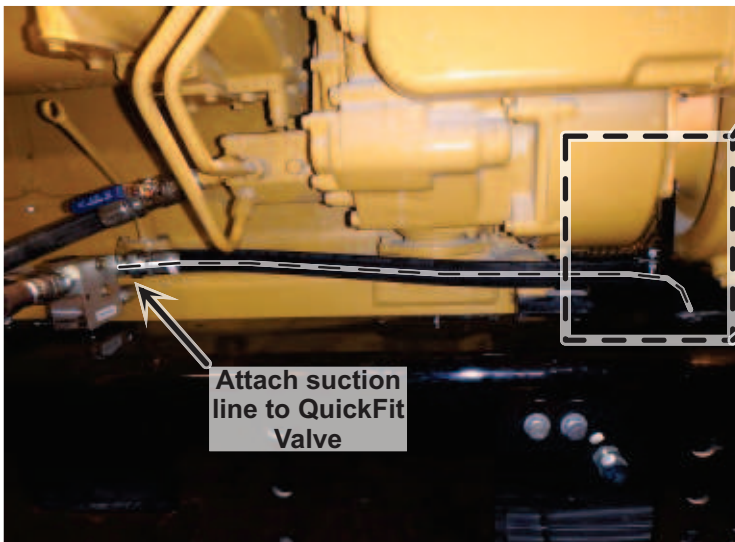

# QuickFit™


INSTALLATION GUIDE

When this block is black, this is an UNCONTROLLED DOCUMENT

Revision Level: 1

Date: 3-3-2015

## Plumbing Diagram (Supplied Kit)

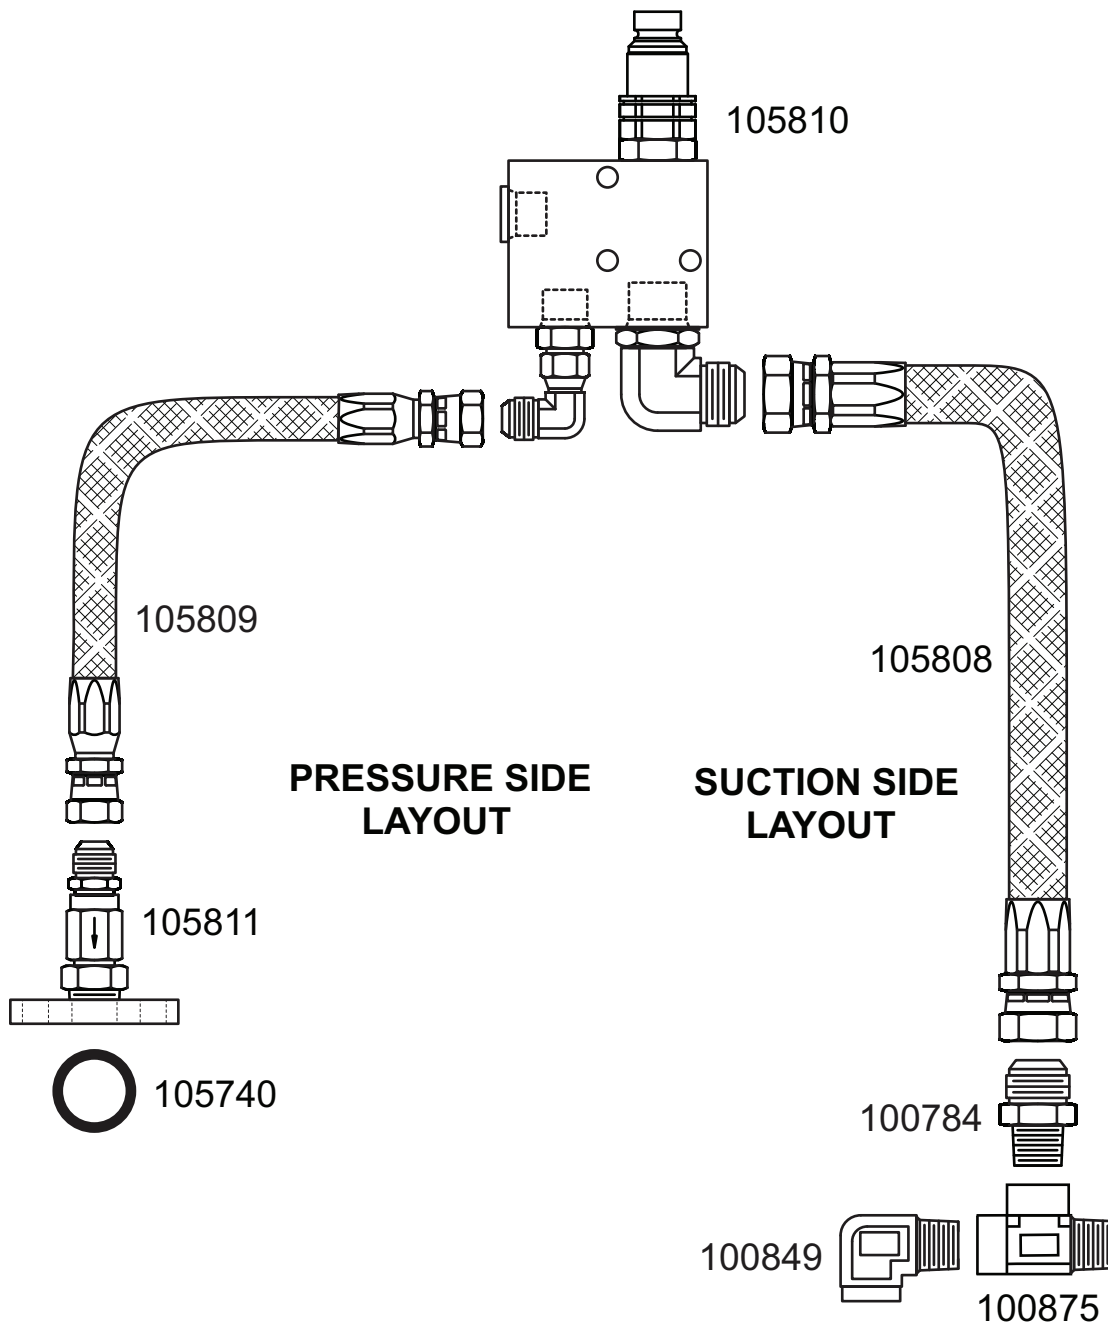


# QuickFit™

## INSTALLATION GUIDE

When this block is black, this is an UNCONTROLLED DOCUMENT

Revision Level: 1  
Date: 3-3-2015

### Plumbing Diagram (Individual Parts)

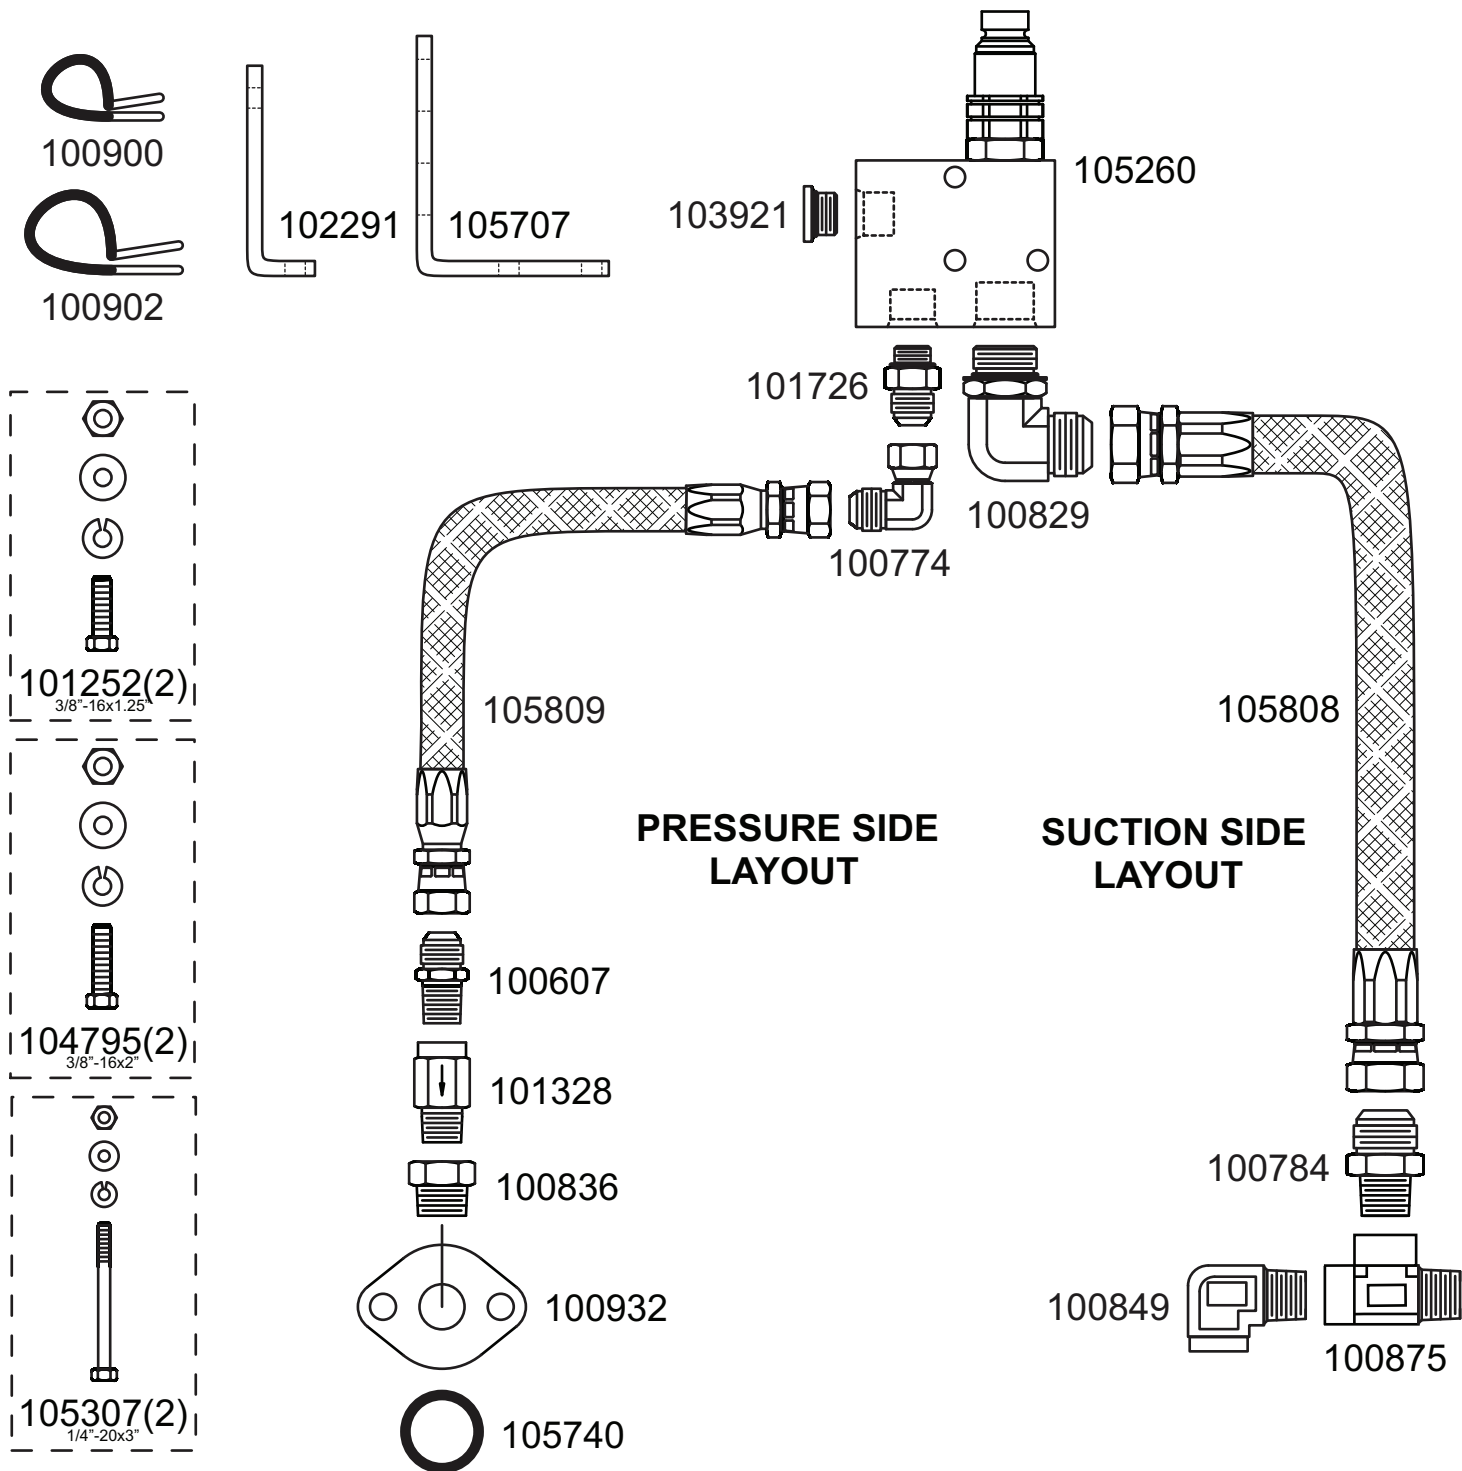

# QuickFit™

## INSTALLATION GUIDE

When this block is  
black, this is an  
UNCONTROLLED  
DOCUMENT

Revision Level: 1

Date: 3-3-2015

Part #	Qty	Part Description
100607	1	Adapter, 8M NPT - 10M JIC
100774	1	ELBOW SWIVEL 90° 10M JIC - 10F JIC
100784	1	Adapter, 12M NPT - 16M JIC
100829	1	ELBOW 90° 16M STOR - 16M JIC
100836	1	Adapter, 12M NPT - 8F NPT
100849	1	ELBOW 90° 12M NPT - 12F NPT
100875	1	TEE 12F NPT - 12F NPT - 12M NPT
100900	1	P-Clip #10 Hose, .937 clamp ID, .406 bolt hole ID
100902	1	P-Clip #16 Hose, 1.25 clamp ID, .531 bolt hole ID
100932	1	Pressure Plate - Oval, 2 Mtg Holes, 12F NPT Inlet
101252	2	Bolt Assm, 3/8-16 x 1.25, H, S, 8, ZD
101328	1	Check Valve, Piston 8F NPT - 8M NPT
101726	1	Adapter, 10M STOR - 10M JIC
102291	2	Bracket - 4" L Shaped (hose P-clip mount)
103921	1	PLUG 10M STOR, 3/8" Allen
104795	2	Bolt Assm, 3/8-16 x 2.0, H, S, 8, ZD
105260	1	QuickFit 1/2" FFQD Valve Assembly
105307	2	Bolt Assm, 1/4-20 x 3.0, H, S, 8, ZD
105513	1	Sticker - PERT
105681	1	Sticker - "QuickFit on Board"
105707	1	Bracket, Extended - QuickFit Small & Medium
105740	1	O-Ring for 100932 plate
105808	1	Hose Assy - FC350 #16 - STR(16 JIC), STR(16 JIC), 54"
105809	1	Hose Assy - FC350 #10 - STR(10 JIC), STR(10 JIC), 40"
105810	1	QuickFit Valve Assy for Altorfer APS2000
105811	1	Check Valve Assy for Altorfer APS2000